

epcatalogs.com


4994 Tractor

Operators Manual

9-9870

Reprinted



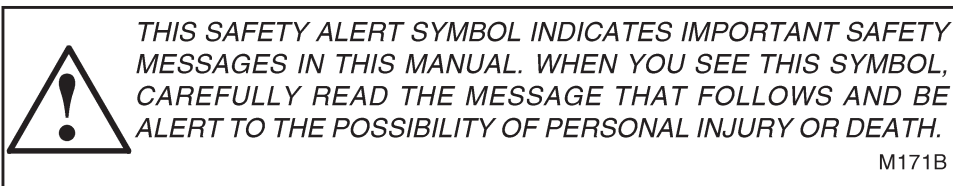




If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TABLE OF CONTENTS

TO THE OWNER	III	ALTERNATOR CHARGING SYSTEM ..	32
SAFETY	IV-XVI	TOWING	32
Safety Rules	IV	OPERATING INSTRUCTIONS	33-137
Before Starting	IV-V	Run-In Procedure	33
Operation	VI-XIV	Before Starting the Engine	34
Service	XV-XVIII	Digital Instrument Cluster	35-60
HAND SIGNALS	XIX-XX	Programming Tire Size	38-40
DECALS	XXI-XXV	Programming Static Loaded Radius ..	41
SERIAL NUMBERS	1	Programming Dynamic	
DIESEL ENGINE SPECIFICATIONS ...	2,3	Loaded Radius	42,43
GENERAL SPECIFICATIONS	4-7	True Ground Speed	44
APPROXIMATE TRACTOR SPEEDS	8	True Ground Speed Sensor	44,45
APPROXIMATE OVER ALL		Programming Attachment Width ..	48,49
MEASUREMENTS	9	Programming PTO Wheel	
APPROXIMATE TRANSPORT WEIGHT ..	9	Position Monitor	50,51
OPERATORS CAB	9	Operating Service Monitors and	
TIRE AND WHEEL EQUIPMENT	10	Bar Indicator	52-57
WHEEL TREAD POSITIONS	12	Automatic Shutdown System	
TIRE PRESSURE	12	(If Equipped)	58
FUEL SPECIFICATIONS	13,14	English/Metric Selection	59
LUBRICATION	15-31	Instrument Cluster	
Engine Hourmeter	15	Functional Checks	60
Lubrication	16,17	Transmission/Steering Diagnostic	
Diesel Engine	18	Monitor	61
Engine Oil Change	19	Transmission/Steering	
Engine Oil Filter	20-22	Diagnostic Codes	62-69
Turbocharger Oil Filter	23	Operating Controls	70-98
Rear Steering Valve Filter	24	Steering Console	70-74
Rear Steering Hydraulic Oil Filter ..	25	Steering Column Tilt	75
Transmission Oil Level		Telescopic	
Check & Change	26	Steering Column	75
Transmission Oil Filter	27	Operators Console	76-81
Hydraulic Oil Level		Park Brake Control	82
Check & Change	26	Fuel Tank Water Traps	83
Hydraulic Oil Filters	28	Cab Headliner Controls	84,85
Planetary Oil Level Check & Change ..	29	Cab Air Flow Control	86
Differential Oil Level Check & Change ..	30	Cab Defroster Control	86
Tractor Brakes	31	Cab Air Flow Arrangements	87-89
		Air Conditioner Operation	90
		Cab Door Lock	90
		Ash Tray	90
		Rear View Mirrors	91
		Cab Window Lever	91
		Operators Seat	92,93
		Seat Belts	94
		Amber Warning Lamps, Direction	
		Turn Signals & SMV	95,96
		Implement Warning Lamps and	
		SMV Symbol	97
		Auxiliary Outlet Socket	98

TABLE OF CONTENTS

OPERATING INSTRUCTIONS

Starting Procedure	99,100
Stopping The Engine	101
Cold Temperature Operation	102
Preparing Tractor For Operating in Cold Temperatures	103
Cold Temperature Starting	104-107
Ether Starting Fluid	104
Coolant Heater	106
Starting Fluid Container Replacement	107
Power Shift Transmission	108-111
Drawbar	112-114
Power Takeoff	115-117
Operating PTO	115
Guards	116
Operating Safety	117
Remote Hydraulic Control	118
Remote Control Levers	118,119
Variable Flow Control	120,121
Operating the Remote System	122
Hydraulic Hose Couplers	123
Hydraulic Hose Coupling	124
Remote Cylinder	125
Hydraulic Cylinder Jack Pads	126
Wheel Mounting	127
Dual Wheel Mounting	128
Tire Mounting	129
Roads Matched to Tractor	129
Tractor Ballast	130-136
Weight Distribution	130-132
Tractor and Equipment Weight	133
Front End Weights	134
Tire Liquid Weight	135
Measuring Slip	136
Hood and Side Panels	137

PREVENTIVE MAINTENANCE ... 138-192

Cooling System	139-148
Pressure Cooling System	139
Coolant Solutions	140
Engine Cooling System Treatment	140
Radiator Cleaning	141
Cooling System Service	142
Thermostat Check	143
Thermostat Replacement	143-145
Fan Belt Adjustment	146
Fan Belt Replacement	147
Water Filter and Conditioner (If Equipped)	148

PREVENTIVE MAINTENANCE (CONT'D)

Fuel System	149
Service Intervals	149
Fuel Filter Replacement	150,151
Primary Fuel Filter	152,153
Air Removal	154,155
Air Induction System	156-164
Air Filter Service Interval	157
Air Filter Service	158-161
Aspirated Strata Tube Service	162,163
Tubes and Hose	164
Electrical System	165-168
Head Lamps	165
Flood Lamps	165
Flashing Amber Warning Lamps	166
Tail Lamp	166
Instrument Cluster Lamps	167
Fuse Panel	167
Head Lamp Adjustment	168
Storage Battery	169-171
When Batteries Are Not in Use	169
Battery Cables and Terminals	169
Battery Water	170
Vent Caps	170
Removal & Installation of Batteries	170
Auxiliary Battery Connections	171
Parking Brake Adjustment	172
Roll Over Protective Structure (ROPS)	173,175
Tractor Roll Over	174
Safety Rules	174
Maintenance and Inspection	175
Operators Cab	176-189
Preventive Maintenance	176,177
Air Filter Service	178-180
Seat Belt Inspection and Maintenance	180
Operators Seat	181,182
Refrigerant Check	183,184
Compressor Belt Adjustment	185
Compressor Belt Replacement	186
Compressor Belt Alignment	187
Dome Lamp	188
Console Lamp	189
Valve Tappet Adjustment	190-192

CASE TECHNICAL MANUALS 193

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can assist you with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.

[Buy now](#)

[Case 4994 Tractor PDF Operator's Manual](#)

[With Instant Download](#)